


# QUIK-KUT TOTAL GLASS REMOVAL TOOL

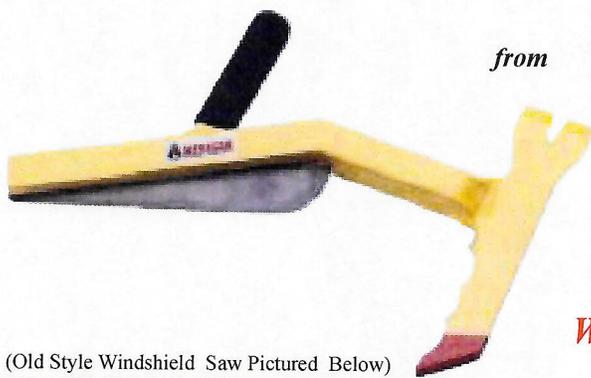

from



## WINDSHIELD REMOVAL

(Old Style Windshield Saw Pictured Below)



1. Drive pointed end of tool into windshield to create access for saw blade.

2. Extend cutting blade and tighten thumbscrew.



3. Insert blade into opening. Use a swing motion to cut along top and side of windshield. Repeat procedure on other side of windshield.

4. If necessary, cut bottom of windshield or use pointed end of saw to break away bottom of windshield.

5. Remove windshield through front of car (away from passengers and over the hood)

## Side and Rear Glass Removal



1. Remove Spring Punch from inside top handle.

2. Place tip against bottom corner of window and hold. Pull back ring end (approx. 2 inches) and release.



3. Clear edges of frame of any remaining particles of glass.

*Also:* The back handle notch may be used to remove windows that are rolled down (Cover edge of window with blanket etc. Place notch over edge of glass and pull saw back to break glass. Glass slides down inside door frame.) and for removing hydraulic lifts on hatchbacks.



**WARNING:** This windshield saw is designed to be used **ONLY** by properly trained rescue personnel with complete protective equipment. The operator of the saw and bystanders must wear a helmet with face shield, safety glasses, (*face shield alone is not adequate eye protection*) bunker coat and pants, steel-toed boots and gloves. \* Improper technique or inadequate protective gear can result in severe injuries.\* The user of the tool is advised to keep his mouth closed to prevent glass from entering during cutting procedure. Always keep patients adequately covered and protected from cut glass.

Call toll free **800 228-7612** \* 937 290-0522 or FAX 937 290-0528

**Howell Rescue Systems, Inc.**

2673 Culver Ave.  
Kettering OH 45429-3721

Visit our website [howellrescue.com](http://howellrescue.com)  
or e-mail [info@howellrescue.com](mailto:info@howellrescue.com)

1-800-228-7612